


POWER TAILGATE LOCK INSTRUCTIONS


Package Contents: Power Lock Assembly
 Long and Short Wire Harness
 Blue Tap Connectors, Zip Ties
 Instructions

Tools Required: 10mm Wrench
 Number 18 Torx Driver

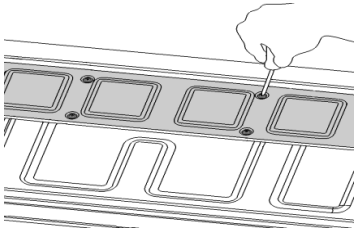


STEP 1: Remove the access panel from the inside of the tailgate.
 (Remove the bedliner cover if applicable)

STEP 2: Remove the passenger side tailgate handle mounting bolt. Install the Pop & Lock electric lock assembly into the tailgate going through the hole in the tailgate right of the handle. Slide the assembly over to the handle. Position the lock so the hole in the Pop & Lock bracket is lined up with the bolt just removed. Replace the bolt putting it through the hole in the lock back into the handle and tighten.

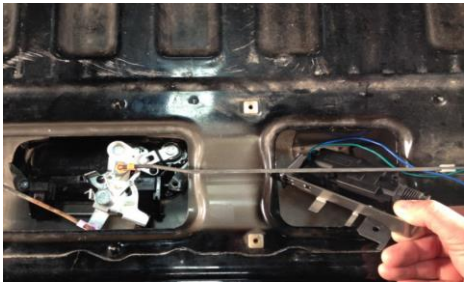

STEP 3: Wiring (there are other ways to run the wiring – this is one way) – Snake the short wiring cable up a drain hole of the tailgate and connect the bullet connectors to the electric lock assembly. Secure the wires with a cable tie to hold the wire from getting pinched. Connect the other end to the long wiring cable. Locate the connector under the truck near the tailgate so that it is accessible for tailgate removal. Run the long wiring cable inside the left frame rail to the engine compartment and secure it with cable ties. Snake it into the driver's compartment using the lead through of the hood release cable. Remove the driver's side kick panel. Locate the wiring harness leading to the driver's side door. For 1999-2003 locate the pink with a black stripe wire and red with an orange stripe wire. 2004-2006 locate the black with a red stripe wire and red with a black stripe wire. NOTE: Some 2004 Tundra's have blue with a white stripe wire and black with a yellow stripe wire. Connect the blue tap connectors to the wires. The connectors snap around the wires. Insert the male terminals from the long wire harness into the blue connectors. (it doesn't matter which one to which at this point) Test the lock with key FOB or door switch. If the lock works opposite of the door locks switch the male terminal connections around. Replace the kick panel.

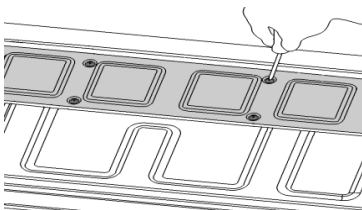

Step 4: Replace the access panel to the inside of the tailgate. (Replace the bed liner cover if applicable)

LIMITED WARRANTY TERMS AND CONDITIONS

- (1) **Installation.** Pop & Lock™, LLC (and Pop & Lock™ Corporation) is not responsible for installing the Pop & Lock™ or for the harm suffered by any person as a result installing it.
- (2) **Warranties.**
- Customer acknowledges that it is unreasonable to believe that any device whatever will prevent a theft in the case of every attempt and that the most that can be expected from a so-called anti-theft or security device is that it will deter many thieves.
 - POP & LOCK™ LLC. (and Pop & Lock™ Corporation) MAKES, AND CUSTOMER RECEIVES, NO WARRANTY, EXPRESSED OR IMPLIED, EXCEPT THE WARRANTIES OF TITLE TO THE POP & LOCK™ AND THEIR MERCHANTABILITY, PARTICULARLY NO WARRANTY OF FITNESS FOR A PARTICULAR USE OR PURPOSE OR AGAINST INFRINGEMENT.**
 - As Customer's only remedy, Pop & Lock™, LLC (and Pop & Lock™ Corporation) will repair or replace, at its option and without charge, any lock that is defective in material or workmanship when received by Customer and is returned to Pop & Lock™ LLC (and Pop & Lock™ Corporation), FOB Pop & Lock™ Corporation's offices, within one (1) year after it's receipt by the Customer. Pop & Lock LLC will ship all replacement, or repaired, Locks to Customer, FOB Pop & Lock™'s shipping point.
 - Factory support is only available for Pop & Lock™ products purchased as **new** through an Authorized Pop & Lock™ dealer.

Please Note: Pop & Lock™ Products purchased on auction sites such as Amazon, Ebay and Craigslist, to name a few, will not be covered under factory warranty under any circumstance. Pop & Lock™, LLC (and Pop & Lock™ Corporation) is unable to verify whether products sold through Auction Sites are new, used, or refurbished, and as such, Pop & Lock, LLC (and Pop & Lock™ Corporation) is unable to warranty such purchases. Pop & Lock, LLC advises using extreme caution when buying through auction sites as you'll be doing so at your own risk.

- (3) **No Liability.** Pop & Lock™ Corporation is not liable for any loss or damage claimed by Customer or any third person to have been suffered or incurred as a result or, or related to, the Locks purchased under this Agreement, regardless of the circumstances or form of action, except any bodily injury or death for which Pop & Lock™ is liable under products-liability law. Without limiting the generality of the foregoing, in no event will Pop & Lock™ LLC be liable to Customer for any indirect, special, or consequential damages, regardless of the circumstances or the cause of action, particularly not for the value of a vehicle, or any other money damages in the event that a tailgate is stolen either notwithstanding the use of a Pop & Lock™ or when it has been returned for repair or replacement.

END OF TERMS AND CONDITIONS

POP & LOCK LLC 1271 CONTRACT DRIVE GREEN BAY, WI USA 54304

Additional Install Instructions and answers to technical questions can be found on our website at www.popandlock.net or by calling

Technical Support 1-800-342-5911 option 1

Monday – Friday 8:30am to 4:30pm CST

Pop and Lock's limited warranty expires one (1) year after date of purchase.

Proof of purchase is required for warranty claims. Please submit a scanned copy or electronic image/photo of your receipt through any of the following methods:

- E-mail: technicalsupport@popandlock.net
- Fax: 855-491-5911
- Mail: 1271 Contract Ave, Green Bay, Wisconsin (USA) 54304

Please be sure to include:

- Name, address and phone number
- Model and year of truck
- Model/Part number of the lock
- Brief description of the problem

